
# **COOKTOP PARTS**


For Models: RF263LXTW0, RF263LXTQ0, RF263LXTT0, RF263LXTB0, RF263LXTS0 (White) (White on White) (Biscuit) (Black) (S.Steel)

30" ELECTRIC FREESTANDING SELF CLEAN RANGE

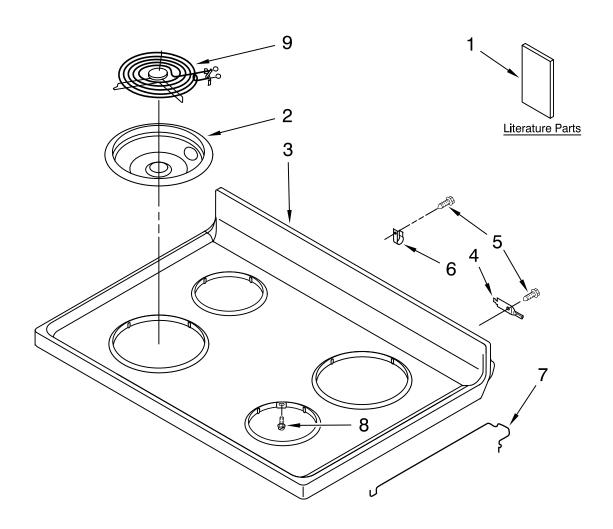

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Literature	2		Bowl, Drip	4	3195060	Hinge, Cooktop (2)
	9762996	Instructions		3195208	6" Chrome (2)	5		Screw (2)
		Installations		3195209	8" Chrome (2)	6		Relief, Strain
		Template, Anti-Tip	3		Cooktop	7	3195812	Rod, Support (2)
	9757142	English/Spanish		3186231	White	8	3196154	
	9757143	English/French		8272527	Biscuit	9		Element, Surface
	9763001	Owners Manual		3186233	Black		9761347	6" (2)
	9762976	Tech Sheet					9761345	8" (2)
	9762761	Safer Cooking Tips						. ,


# **CONTROL PANEL PARTS**

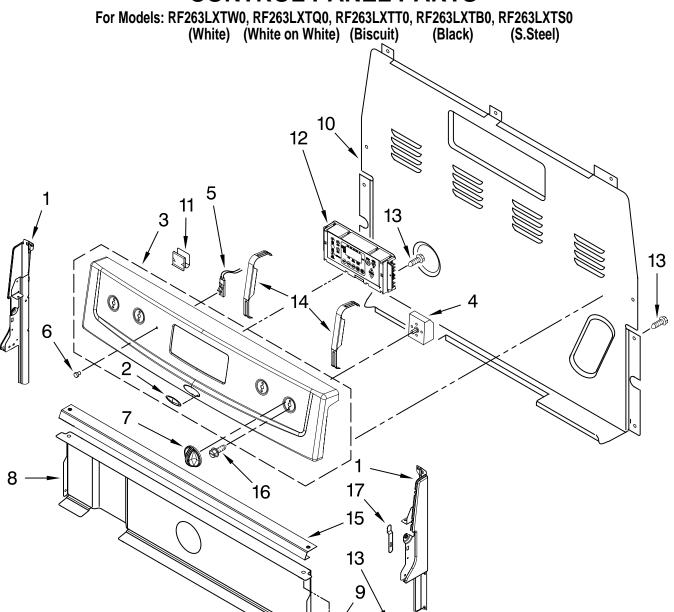

Illus. No.		DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus No.		DESCRIPTION
1	W10009040	Endcap White Left Hand	4	3148954	Switch, Infinite LF/RR	10 11	8272473 8273564	Cover, Upper Clip
		White Right Hand		3148952		12		Control, Range
		Biscuit Left Hand	5		Light, Indicator		W10114376	
		Biscuit Right Hand			Surface Unit (2)		W10114378	
		Black Left Hand	6	3196068	Lens, Light (3)		W10114377	
		Black Right Hand	7		Knob, Infinite (4)		W10114379	
2	9757609	Nameplate	1	9761962	White	13	3196178	Screw
3		Panel, Control		9761963	Biscuit	14	9762078	Brkt–Mntg, EOC
	9762015	White		9761964	Black	15	9762095	Brkt-Mntg, Consol
	9762016	Biscuit	8	8053912	Shield, Heat	16	3400882	Screw
	9762017	Black	9		Screw	17	3196200	Clip, Spring (2)
	W10117592	S.Steel		3196166	White			
				8281194	Biscuit			
				3196168	Black			

### **CHASSIS PARTS**

For Models: RF263LXTW0, RF263LXTQ0, RF263LXTT0, RF263LXTB0, RF263LXTS0 (White) (White on White) (Biscuit) (Black) (S.Steel)

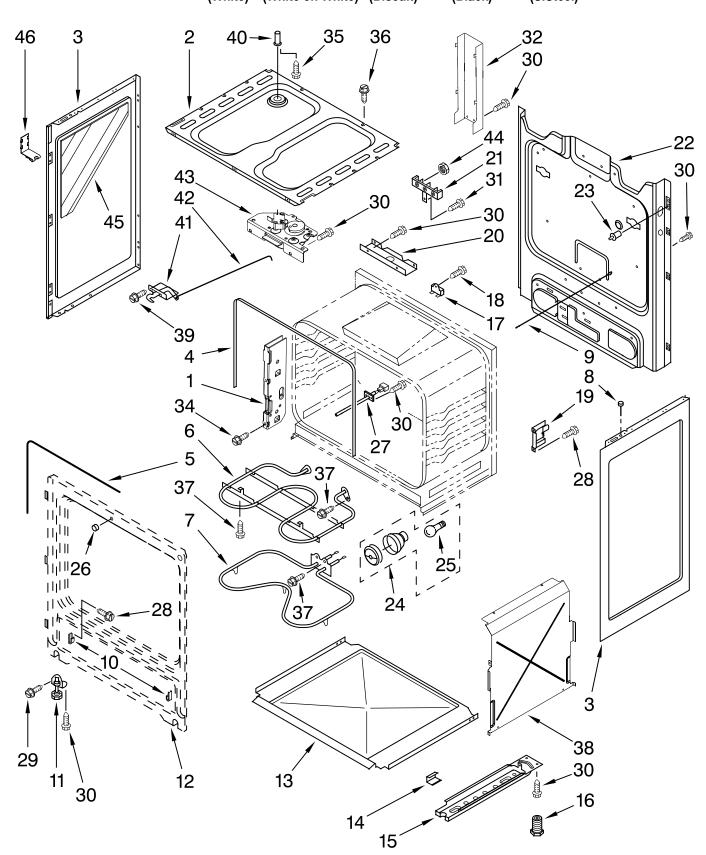

# **CHASSIS PARTS**

For Models: RF263LXTW0, RF263LXTQ0, RF263LXTT0, RF263LXTB0, RF263LXTS0 (White) (White on White) (Biscuit) (Black) (S.Steel)


Illus No.	. Part No.	DESCRIPTION			
1 2 3	9760407 3186144	Brkt – Mounting Box, Burner Panel, Side (2) Incl Side Foil #45			
4 5 6 7 8 9 10 11 12	8053830 8272519 8053832 W10010350 8522416 9757340 9758541 3195809 9757239 9759785 3196037	White Biscuit Black Seal, Oven Flange Seal, Oven Door Element, Broil Element, Bake Bumper (2) Rod – Dr Switch Glide, Drawer Frnt Foot, Front (2) Frame, Front (Not Serviced)			
13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 40 40 40 40 40 40 40 40 40 40 40 40	8054068 3196576 9760314 W10058460 3196548 3196172 3186116 3186034 9761958 8274034 9757262 3196701 311255 9758701 8273902 3196169 3196179 3196178 3400016 9758283 W10031780 3196567 3196168 3196174 9758238 3196560 9755804 9761013 W10078380 W10107820 112432 9761490 9761512	Tray, Insulation Clip, Panel (6) Rail, Base (2) Foot, Rear (2) Thermal, Fuse Screw Support, Oven (2) Bracket, Service Block, Terminal Back, Main Switch, Door Light Socket Assy Bulb, Oven Light Spacer – Door Sensor, Oven Screw Screw Screw Screw Cover, Box Screw Screw Screw Screw Screw Screw Screw Screw Screw Retainer, Insul(2) Screw (2) Tube, Vent Latch, Door Rod, Latch Latch Asy, Rear Nut Insulation, Side Clip, Mounting			

### **INSULATION**

8272616 Insulation, Wrap 8272612 Insulation, Back


# **DRAWER & BROILER PARTS**

For Models: RF263LXTW0, RF263LXTQ0, RF263LXTT0, RF263LXTB0, RF263LXTS0 (White) (White on White) (Biscuit) (Black) (S.Steel)

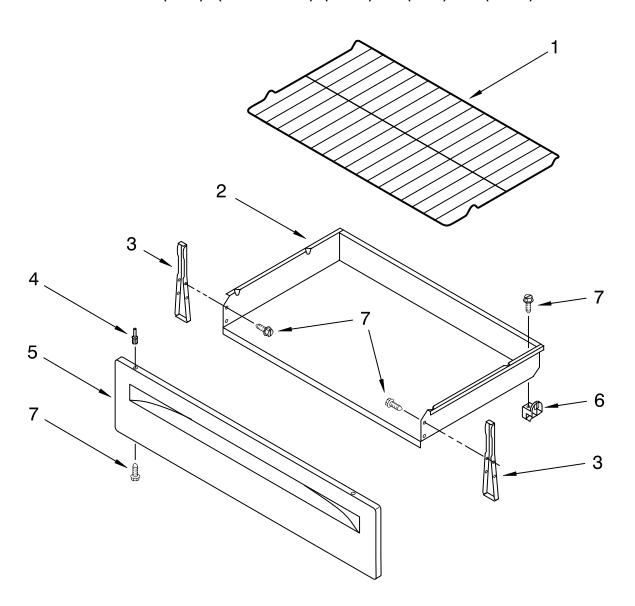

Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (2)
2	9761030	Drawer, Storage
3	9758200	Bracket, Drawer(2)
4		Rivet, Push (2)
	3196814	White
	3196815	Almond
	3196813	Black
5		Panel, Drawer Frnt
	8053339	White
	8272501	Biscuit
	8053341	Black
6	8053334	Glide, Drawer (2)
7	3196168	Screw

# **DOOR PARTS**

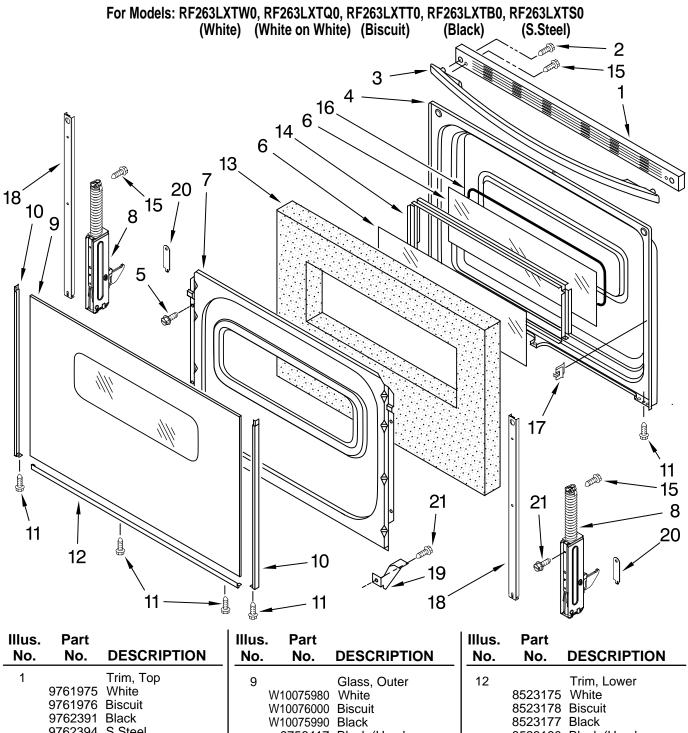

IIIus No.		DESCRIPTION	IIIus. No.		DESCRIPTION	Illus.	. Part No.	DESCRIPTION
1 2 3	9761975 9761976 9762391 9762394 3196164 9761982 9761984 9761983 9761344 W10031790 9758162 9761357	Trim, Top White Biscuit Black S.Steel Screw Handle, Door White Biscuit Black Liner, Door	9	W10075980 W10076000 W10075990 9756417 8523172 8523166 8523173 8523167 8523171	Glass, Outer White Biscuit Black Black (Used on S.Steel Model) Trim, Side White Left Hand White Right Hand Biscuit Left Hand Biscuit Right Hand Black Left Hand Black Right Hand	13 14 15 16 17	8523175 8523178 8523177 8523180 8272618 3186289 W10031780 8522414 3196025 W10113759 3196794	Trim, Lower White Biscuit Black Black (Used on S.Steel Model) Insulation Frame, Window Screw Seal, Window Clip, Glass (6) Strap, Door Bracket, Window Clip, Dr Mntg (2)

### **OPTIONAL PARTS (NOT INCLUDED)**

For Models: RF263LXTW0, RF263LXTQ0, RF263LXTT0, RF263LXTB0, RF263LXTS0 (White) (White on White) (Biscuit) (Black) (S.Steel)

Illus. Part No. No. DESCRIPTION

Following Parts Not Illustrated

### SPLICING WIRES--25FT. LENGTH

242828 Wire, Black 12 Ga. 150° c 242821 Wire, Blue 14 Ga. 150°c 242822 Wire, Brown 14 Ga. 150°c 242830 Wire, Brown 14 Ga. 200°c 242823 Wire, Green 14 Ga. 150°c 242824 Wire, Orange 14 Ga. 150°c 242825 Wire, Red 14 Ga. 150°c 242831 Wire, Red 14 Ga. 200°c 242827 Wire, Yellow

#### **REFINISHING MATERIAL**

799832 Kit, Porcelain Repair (White) 242756 Touch–Up Self–Clean(1/2 Pt) 261582 Grease

14 Ga. 150°c

Illus. Part
No. No. DESCRIPTION

#### **INSULATION**

261514 Insulation, Fiberglass (1–1/2" x 24" x 120") 240132 Insulation, Fiberglass (2–1/2" x 22" x 120")

#### PAINT, TOUCH-UP (1/2oz.)

72017 White 4392899 Biscuit 511873 White Porcelain (2 Oz.)

# PAINT, PRESSURIZED SPRAY

(12 oz.)

350930 White 4392901 Biscuit 285006 Superior Black 206922 Primer (White)

### PAINT, BULK (1 qt.)

799344 White (Uncut) 4392900 Biscuit(Uncut) Illus. Part No. No. DESCRIPTION

#### **ACCESSORY PARTS**

241430 Foil, Aluminum Oven (18" x 25') 3191048 Cleaner, Glass 4396923 Pan, Broiler

### **ANTI-TIP KIT**

W10017440 Anti-Tip Kit

### **WIRING HARNESS PARTS**

9762428 Harness, Wire
(Sensor/Dr Switch)
9761476 Harness, Surface
Unit
311227 Wire, Ground
3196154 Screw
9762952 Harness, Wire
(Main)
313660 Clip, Wire Ground
3196173 Screw
308605 Relief, Strain
8524132 Shield, Wiring
3196174 Screw
(Grnd Wire / Back)